
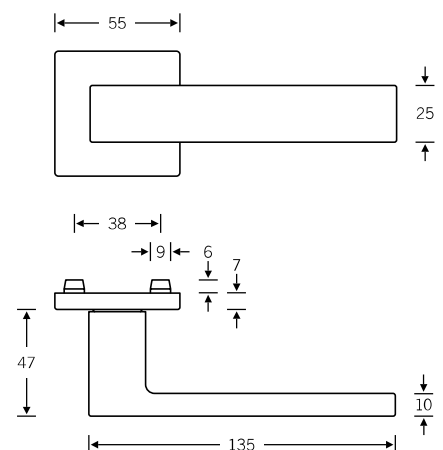


The FSB 1251 conjures up images of 'square, practical and good', though its design is best summed up in the words of the great master himself: 'Rectangular, no-frills design defined solely by proportional contrasts – a miniature architectural counterpart to soberly planned houses. Supreme manufacturing precision reinforces the design's clarity.' (Hartmut Weise)

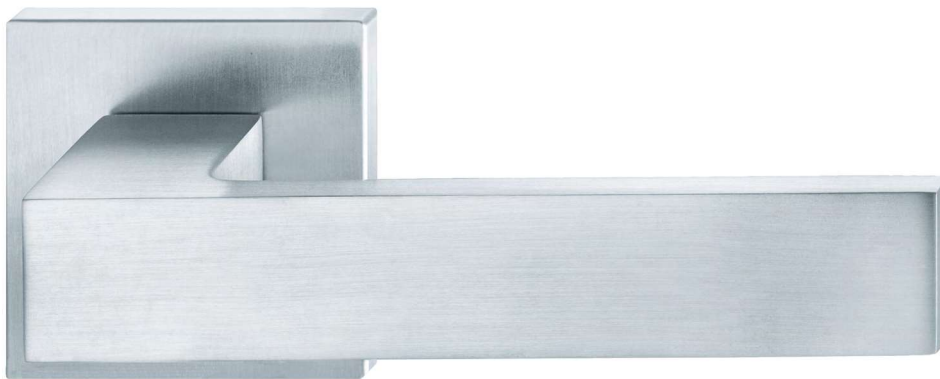


Design: Hartmut Weise

Other variants:  
– round roses  
– oval/angular backplates

Window handle

34 1251

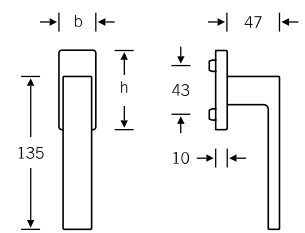


4




## Lever/lever sets


Broad backplate sets available upon request




➤ 12 1251 041 (N)



➤ 12 1251 001 (N)

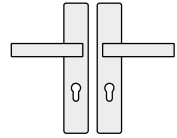

➤ 12 1251 021 (N)




➤ 13 4220 042 (R) with  
12 1241 041 (N)


➤ 13 4220 052 (L) with  
12 1241 041 (N)

## Lever/knob sets


Broad backplate sets available upon request;  
for associated knobs, see page 328 f.



➤ 12 1251 043 (N)




➤ 12 1251 003 (N)

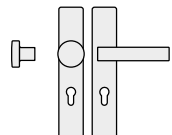


➤ 12 1251 023 (N)

---


## WC sets




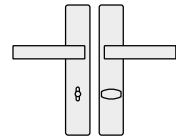
 12 1251 045 (N)


Broad backplate sets available upon request

---



 12 1251 005 (N)



 12 1251 025 (N)

---




## Window handles






34 1251 09032 (rose 27 × 62 × 10)  
34 1251 09040 (rose 32.5 × 70 × 10)  
34 1251 180 (lock adaptor RC 1–6)  
34 1251 086 (lock adaptor with push-button RC 1–6)

---

N = non-handed  
R = DIN RH, opening inwards  
L = DIN LH, opening inwards  
ILS = inactive-leaf set

 Female handles  
 Plug-in handle for doors  
 FSB ASL®

 FSB AGL®  
 FS heavy-duty fitting  
 EN 179 heavy-duty fitting

For bearings, see page 52 ff.